





## E941 Icon Meaning Summary

Icon	Status	Meaning	Notes
		SIM1 / SIM2 No signal	May be the signal is not present or the SIM is not correctly inserted
		SIM1 / SIM2 Signal searching / Signal Level	
		No power	
		charging	
		BT powered on	
		Call Active	
		Call Hold	
		Call Mute	
		Alarm on	
		Audio playing	
		Background sound on	
		SIM1 / SIM2 CSD connection	
		SIM1 / SIM2 EDGE connection	
		SIM1 / SIM2 EDGE connecting	
		SIM1 / SIM2 GPRS connection	
		SIM1 / SIM2 GPRS connecting	
		SIM1 / SIM2 Call forward	
		SIM1 / SIM2 Missed Call	
		SIM1 / SIM2 new messages	
		SMS sending	
		SIM1 / SIM2 roaming	Determined by Operator
		SIM1 / SIM2 MMS busy	
		SIM1 / SIM2 new MMS	
		SIM1 / SIM2 / both new emails	
		Earphone plugged in	
		Profile ring mode	

		Profile silent mode	
		Vibrate and ring	
		Vibrate then ring	
		Profile Vibrate mode	